Instructions for use the LBE16 Washing Machine

Index	Pag.
1. Instructions for unpack and transport	2
2. Plinth dismount	3
3. Rubber strap dismount	4
4. Rubber strap use	5
5. Door dismount	6
6. Cleaning	7

1. Instruction for unpack and transport

NO

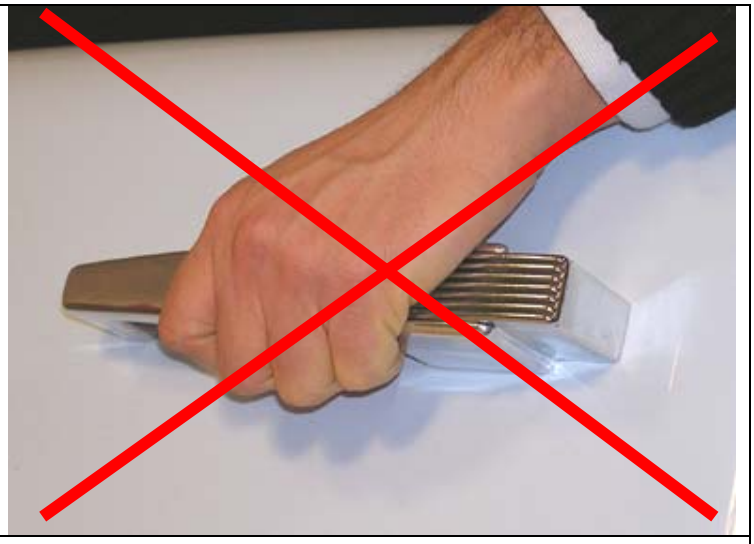

NO

NO

NO

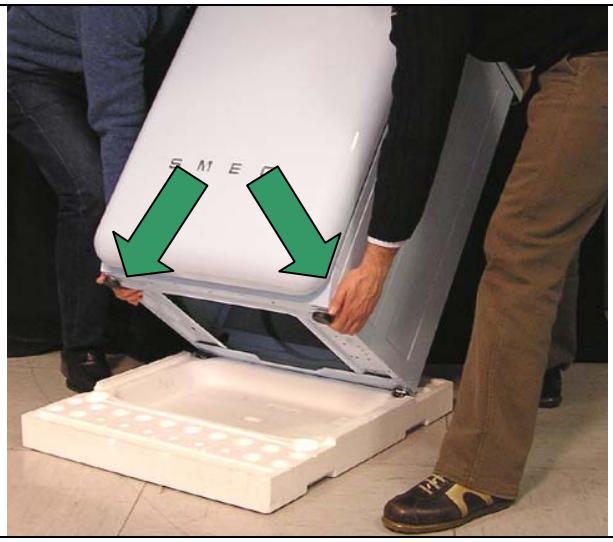

YES

YES

2. Plinth dismount

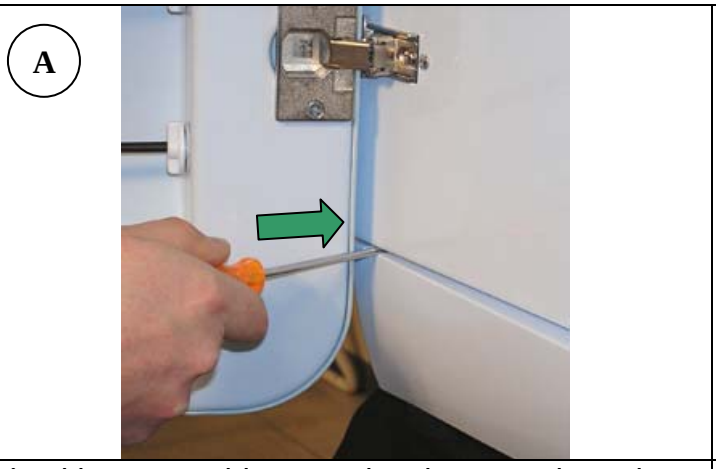

1) With a screwdriver, makes lever on the points ….

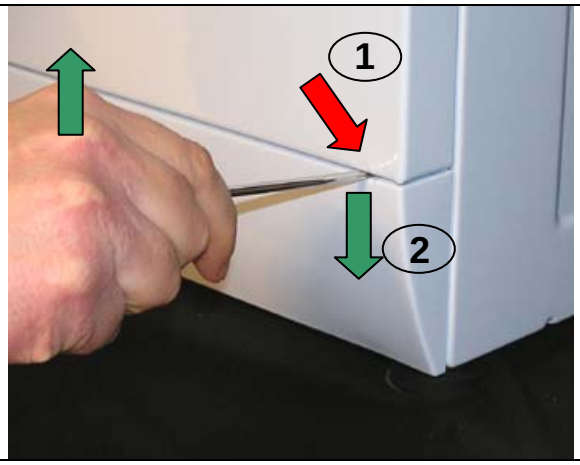

2) … indicated, with a movement from the bottom to the upper …

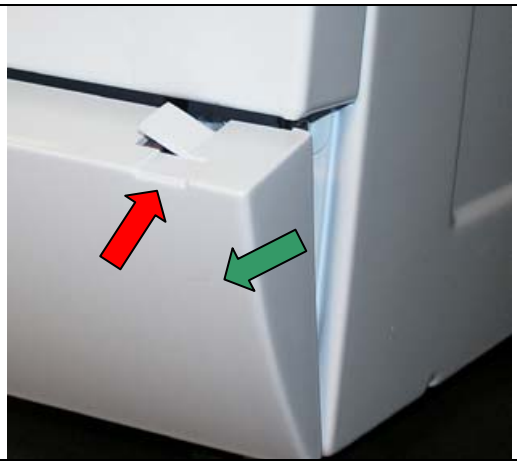

3) in order to permit the plastic tooth, on the plinth, to come out from the site

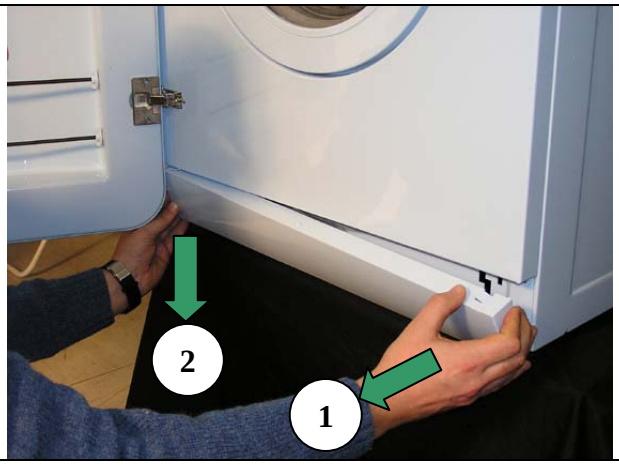

4) After the described operation on both sides, proceed with the plinth dismount following the order in picture.

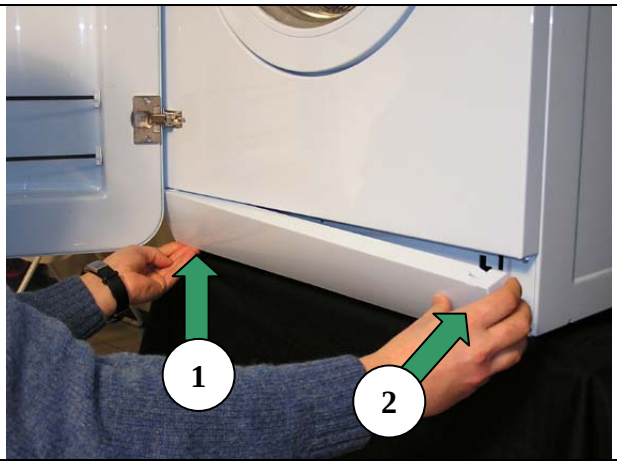

5) For the assemblage of the plinth, follow the order on the picture.

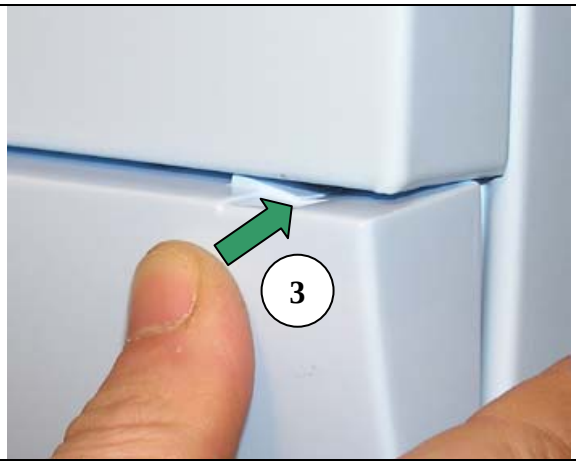

6) Finish the operation with a light pressare on the points in picture. The “click” sound will indicate that the plinth is assembled.

3. Rubber strap dismount

	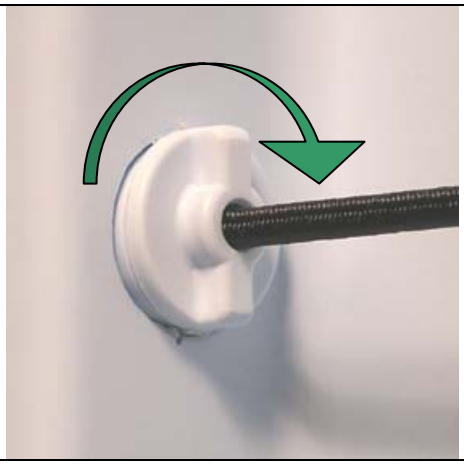
1) For remove the rubber straps on the door	2) rotates the plastic terminal for 180° ….

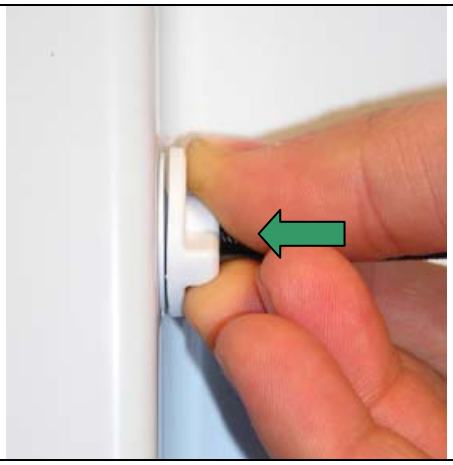	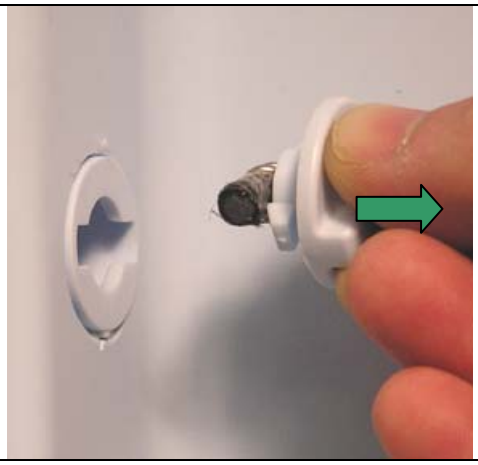
3) … with a light pressure…	4) and the extract them.

4. Rubber strap use

In picture, the possibility to insert some products in the vain can be appreciated …

ATTENTION:
Weight Max 4,0kg

… these products are of daily use, e.g. detergents, softener etc.

ATTENTION

This appliance is intended for use by adults.
Do not allow children to tamper with the controls or play with the washing machine.
Do not allow children to approach the appliance.
Keep children away from the appliance.

5. Door dismount

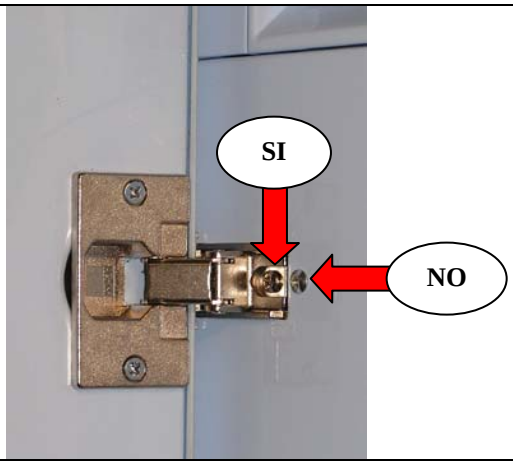

1) For remove the door, unscrew the indicated screw

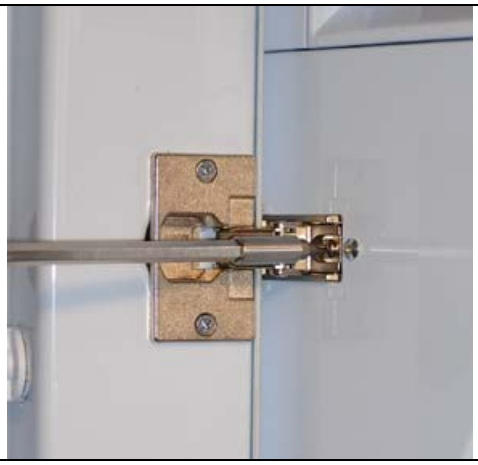

2) on both the hinges (cross screwdriver)

3) support the door and extract …

4) .. the hinges from their sites.

6. Instruction for cleaning

Instructions for the cleaning of the product:

The surfaces have to be cleaned with water and soft clothes (e.g. micro fiber)

<u>Do not use never</u> chemical products or aggressives (e.g. abrasives clothes, etc.)

YES	**NO**

YES	**NO**